SAMSUNG

Owner's Instructions

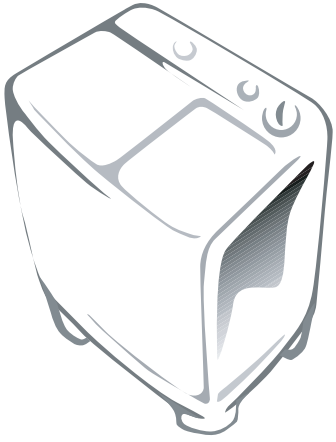

Before operating the unit, please read this manual throughly, and retain for future reference.

BEFORE USING THE WASHER 1
CAUTIONS 1
PRECAUTIONS WHEN OPERATING. 1
DESCRIPTION OF PARTS 2
CONTROL PANEL 2
INSTALLATION 3
- **ENVIRONMENT 3**
- **CHANGING THE POSITION OF THE DRAIN HOSE 3**
- **HOW TO CLEAN THE FILTER 3**
- **CONNECTING THE DRAIN HOSE 3**

CLEANING THE MACHINE 3
WASHING PROCEDURE 4
- **TO WASH 4**
- **SPIN DRY 5**
- **RINSING 5**
- **OVER FLOW RINSE 5**
- **ADDITIONAL RINSE 6**

LAUNDRY GUIDE 6
MAINTENANCE 6
TROUBLESHOOTING 7
SPECIFICATIONS 7

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

Register your product at
www.samsung.com/register
CODE NO. : DC68-01942X-03_EN

BEFORE USING THE WASHER

- In case of pump drained washer, remove the cap-hose from the drain hole.

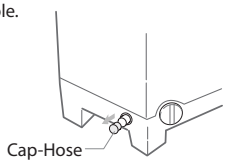

- Take out personal belongings from pockets.
  Caution, Check the pockets!
  Hairpins and coins cause damages to clothes and washing machine.
  They make noise and problems to the machine.
  Must check the pocket.



CAUTIONS

- **Be sure that the washer is grounded.**
  To avoid electrical shock, use a metal pipe for the ground connection. But, don't ground the washer with gas pipes or telephone lines to avoid to dangers of explosion or lightning strike.



- **The hand shall not be inserted into running water extracting tub.**
  Your fingers can be caught by spinning laundry and damaged.

- **Never allow children to operate or play with the washer.**
  Children playing with the washer may accidentally fall into the washing tub.

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer,because special purpose tools are required.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **The washing machine whose lid can be opened during water extraction, that if it takes 15 s or more for complete stop of water-extracting chamber tub such a case should be understood as a trouble.**

PRECAUTIONS WHEN OPERATING

- **Don't use excessively hot water. (50°C or more)**
  Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.
- **Before washing,check all pockets.**
  If nails or pins remain in pockets,they may damage the washer or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes,close the wash tub lid.**
- **Never splash water on the control panel.**

- **Be sure to cover with the safety cover on laundry before spinning.**
  This prevents laundry from being tossed out and damaged.



- **Be sure lay the drain hose(A) down.**

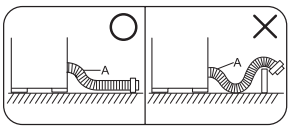

(WITHOUT PUMP)

- **Be sure place the drain hose(A) in sink or bath about 70~80cm above the ground.**

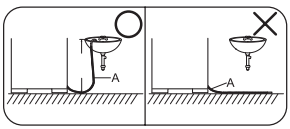

(WITH PUMP)

WT60J7WNC1-01942X-03_EN.indd 2 2013-05-23 □□ 5:24:55

DESCRIPTION OF PARTS

SPIN DRYER LID
When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.

OVER FLOW FILTER

LINT FILTER
This is used for gathering the dregs which are made during washing.

WASH TUB LID
Be sure to keep the lid closed during washing and spinning.

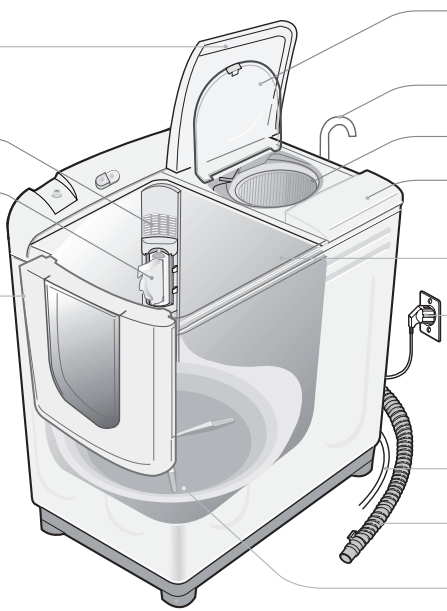

INNER LID

DRAIN HOSE
(WITH PUMP)

SPIN DRYER BASKET

SPIN DRYER HATCH

WASH TUB

POWER CORD
The plug's shape may not correspond with this drawing.

EARTH WIRE
(Option)

WATER DRAIN HOSE
(WITHOUT PUMP)

PULSATOR

CONTROL PANEL

1. **WATER SELECTOR**
   During washing, WATER SELECTOR KNOB should be selected to wash.During spin rinsing, WATER SELECTOR KNOB should be selected to spin.
2. **WASH TIMER**
   This is used to set the wash time, 1-15 minutes.
3. **WASH SELECTOR**
   You can wash laundry effectively by various methods.
4. **CYCLE SELECTOR**
   This is used to set the Washing/Rinsing or Draining.
5. **AIR TURBO SPIN TIMER**
   This is used to set the spin time, 1-10 minutes.

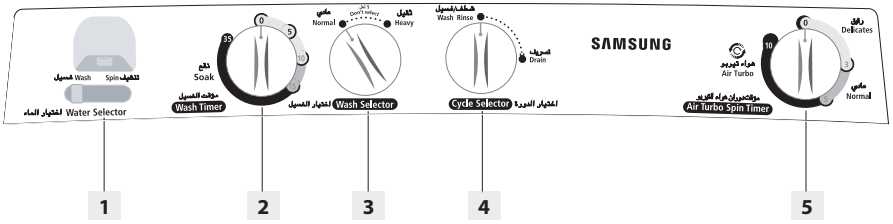

WT60J7WNC1-01942X-03_EN.indd 3 2013-05-23 5:24:56

INSTALLATION

ENVIRONMENT

Leave some space

Space at last 15cm between the washer and the wall.

Place the washer on a sturdy flat surface.

If the washer is placed on an uneven or weak surface, noise or vibration may be occured. (Allowable is 2°)

The washing machine shall not be inserted at a humid place.

Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.

Avoid direct sunlight or heating devices.

As plastic and electrical components are affected by direct heat, never place the washer near heaters, boilers,etc. Do not place under direct sunlight.

CHANGING THE POSITION OF THE DRAIN HOSE

Before attempting to change the position of the drain hose, disconnect the plug from the outlet.

1. Route the drain hose inside the machine.
2. Take out the drain hose from the opposite hole and insert the drain hose into the hose holder.

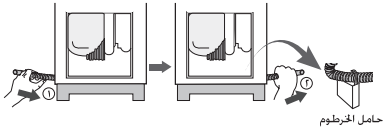

HOW TO CLEAN THE FILTER (In case drain pump)

1. Place a rag under the washer filter not to wet the floor.
2. Rotate the filter counterclockwise and pull out the filter.
3. Remove dirts and rotate the filter clockwise until it locks in position.

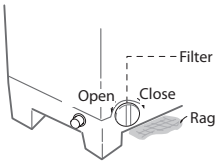

Remark : Should be cleaned Filter at least 1 time a week.

CONNECTING THE DRAIN HOSE

Insert the drain hose(a) and push it tighly to be connected as arrow direction.



(WITHOUT PUMP)

Install the drain hose(A) about 70~80cm above the ground for pump model.

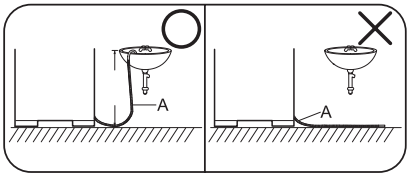

CLEANING THE MACHINE

CLEANING THE LINT FILTER

If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.Remove the collected lint and rinse the filter net.

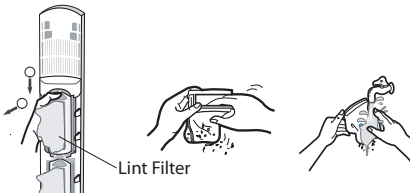

CLEANING THE WASH TUB

Wipe off strains on the cabinet and operation panel with soft cloth. Do not use benzene, thinners, cleanser, or wax, nor scrub the washer with a brush. Painted surfaces or plastic parts will be damaged.

CLEANING THE COVER WINDOW SPIN

1. Rotate the cover window spin clockwise and pull out.
2. Cleaning the cover window spin.
3. Insert the cover window spin back and rotate it counterclockwise until locks in positon.

Remark : Should be cleaned the cover window spin at least 1 time a month.

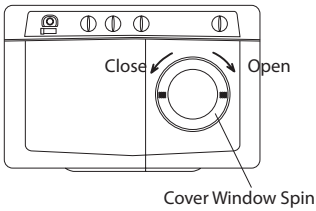

WT60J7WNC1-01942X-03_EN.indd 4 2013-05-23 □□ 5:24:57

WASHING PROCEDURE

TO WASH

1. **Before starting washing, check the following;**
   - Connect the water supply hose and open the water tap.
   - Connect the power cord to the power supply outlet.
   - Lay the drain hose(A) down toward a sinkhole.

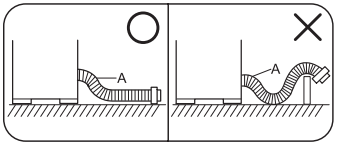

   - Place the drain hose(A) in sink or bath about 70~80cm above the ground.

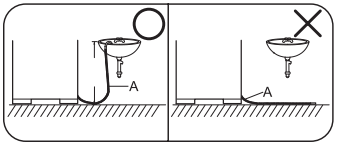

2. **Set the WASH SELECTOR KNOB to the desired mode. 'NORMAL or HEAVY'**

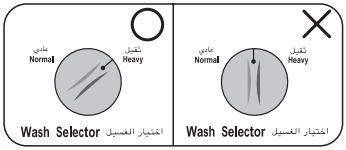

3. **Set the CYCLE SELECTOR KNOB to 'WASH.RINSE'.**
   (In case no drain pump.) ('**WASH**' In case drain pump.)

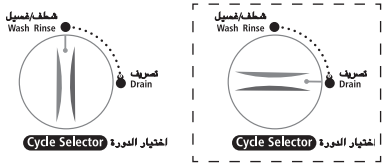

4. **Set the WATER SELECTOR KNOB to WASH.**

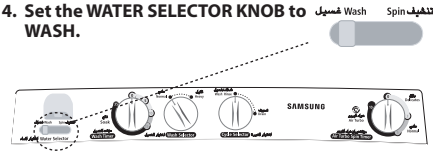

5. **Put the cloths into the wash tub and set the same water pressure to fill the tub so as not to exceed 'H3'level wash tub and set the same water pressure to fill the tub so as not to exceed 'H3'level..**

6. **Fill water in the wash tub to the" L1"lower water level by carefully adjusting the tap water and add the detergent.**

7. **Set the WASH TIMER 1-35 minutes.**

SOAK

   - Set the WASH TIMER to the point more than "15" for SOAK function.
   - If the WASH TIMER is set to the point less than "15", it leads to WASH only. (No SOAK)
   - If Although the machine may stay still maximum 5 minutes, if the WASH TIMER is indicated over 15 minutes position, it is just in the process of soaking and not a breakdown.

8. **After washing,set the CYCLE SELECTOR KNOB to 'DRAIN' for drain.**

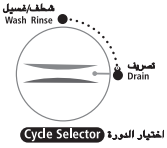

9. **Soak-Washing**
   1) Place clothes into the WASH TUB.
   2) Turn on tap or use bucket to fill the WASH TUB with desired amount of water.
   3) Put detergent depending on the water volume and detergent package indications.
   4) Set WASH TIMER to point between "15" to "35" in the timer.
   - Soak-Washing automatically starts the wash (15 min.) after the soak (2 to 20 min.) is completed.
   - The SOAK function (20 min.) repeats the cycle that is 1.5 ~ 2.0 min. turning and the next 5 min. resting 3 times.

WT60J7WNC1-01942X-03_EN.indd 5 2013-05-23 5:24:58

SPIN DRY

1. **Transfer the clothes into the spin basket and arrange the clothes evenly.**

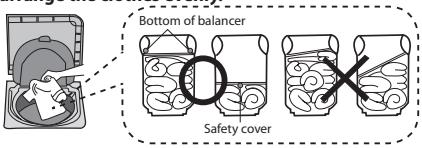

2. **Be sure to attach the safety cover and close the inner lid.**

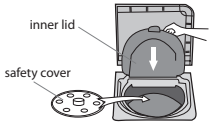

3. **Close the spin dryer lid.**



4. **Set the AIR TURBO SPIN TIMER 1-10 minutes.**

5. **Incomplete spining.(Severe vibration or unbalance) See "When you load ..." on page 6.**

RINSING

1. **Set the CYCLE SELECTOR KNOB to 'WASH·RINSE'.** (In case no drain pump.) ('**WASH**' In case drain pump.)

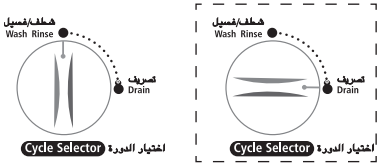

(WITHOUT PUMP) (WITH PUMP)

2. **Supply the proper amount of water as not to overflow the top of the washing tub.**

3. **Set the WASH TIMER 2~3minutes.**

4. **Drain the water. Set the CYCLE SELECTOR KNOB to 'DRAIN'.**

5. **Repeat this cycle until drain water is clean. (2~3 cycles)**
6. **In case no drain pump.**
   - Be sure lay the drain hose down.

   In case drain pump.
   - Be sure place the drain hose in sink or bath.

OVER FLOW RINSE

1. **Keep suppling water**

Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.

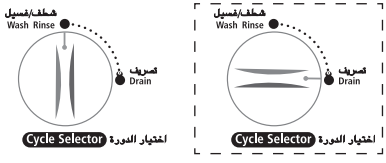

(WITHOUT PUMP) (WITH PUMP)

2. **Set the WASH TIMER 6~8minutes.**

3. **As soon as the WASH TIMER shuts off, turn off the water tap.**

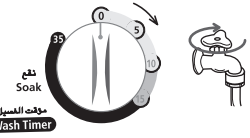

4. **Set the CYCLE SELECTOR KNOB to 'DRAIN'.**

WT60J7WNC1-01942X-03_EN.indd 6 2013-05-23 5:25:00

ADDITIONAL RINSE

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)

1	Load the laundry evenly into the spin basket.	**4**	After stopping water supply, cover the laundry with safety cover and close the inner lid. 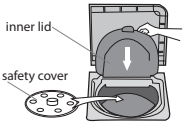
2	Set the WATER SELECTOR KNOB to SPIN (a) and CYCLE SELECTOR KNOB to 'DRAIN'(b). 	**5**	Close the spin dryer lid. 
3	Supply water for about 1 minute. Adjust the water flow to prevent overflow from the wash tub. **1min.**	**6**	Set the AIR TURBO SPIN TIMER 2~3 minutes.

LAUNDRY GUIDE

AMOUNT OF CLOTHES

Water Level	L	M	H
Shirts(Synthetics)	22 Pieces	29 Pieces	35 Pieces
Under Shirts(Cotton)	38 Pieces	48 Pieces	28 Pieces
Working clothes(Cotton)	16 Pieces	20 Pieces	52 Pieces

DETERGENT

AMOUNT OF DETERGENT	WATER LEVEL
44 g	LOW (44ℓ)
56 g	MIDDLE (56ℓ)
67 g	HIGH (67ℓ)

SPIN DRY TIME

TIME	TYPE OF LAUNDRY
1min.	Thin(synthetic fiber)
1~2min.	wool
3~5min.	cotton
5min.	thick(cotton)
10min.(Air Turbo)	thick(cotton)

- **The amount of detergent is average.**
  Follow the instruction detergent printed on the package for amount of detergent.
- **Choose the amount of detergent depending on the fabric type.**

MAINTENANCE

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

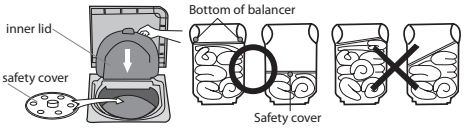

TO PICK OUT THE CLOTHING WHICH HAS FALLEN BETWEEN THE BASKET AND TUB.

For safety, pull the power supply plug out of the socket.

1.Disassemble a screws from the spin dryer hatch.
2. Pull up the spin dryer hatch to remove it.
3. Remove the clothing
4. Close the spin dryer hatch.

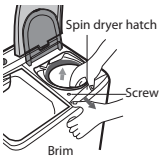

WT60J7WNC1-01942X-03_EN.indd 7 2013-05-23 5:25:00

TROUBLE SHOOTING

TROUBLE	CHECK POINT	TROUBLE	CHECK POINT
1. The washer does not work.	Check that the power cord is connected to a power outlet well.Power stoppage?	4. Water dose not drain.	In case no drain pump. - Be sure lay the drain hose down. In case drain pump. - Be sure remove the cap-hose from the drain hole. • See "Before using..." on page 1.
2. Clothes will not move freely.	Is the laundry overloaded?	5. The spin dryer basket will not run.	Is the spin dryer lid closed completely? Are laundry(socks,etc.)falling out of the spin dryer basket and clinging to the axle? • See "To pick out..." on page 6.
3. Incomplete spinning. (Severe vibration or unbalance.	Are the laundry arranged evenly? • See "When you load..." on page 6.	6. The water drains out immediately.	In case no drain pump. - Is the Cycle Selector set to drain? - Is the drain hose clogged with scrap? • Hang up drain hose over the drain hose hook. Half fill the wash tub with the water and try for drain again. (Scrab will be removed by water drain pressure.) In case drain pump. - Is the drain hose hung about 70~80 cm above the ground? • See "Connecting the drain..." on page 3.

SPECIFICATION

MAX WASHING CAPACITY	7 kg	
MAX SPIN CAPACITY	3.5 kg	
DIMENSIONS (mm)	W820mm x D524mm x H1000mm	
WATER PRESSURE	0.05~0.78 MPa 0.5 ~ 8.0 kg.f/cm^2	
WEIGHT	36 kg	
EXTRACTION EFFICIENCY	50 %	
STANDARD QUANTITY OF WATER	Low : 44 ℓ Middle : 56 ℓ High : 67 ℓ	
MOTOR MAX INPUT	550 W	
WASHING POWER CONSUMPTION	350 W	
SPINNING POWER CONSUMPTION	250 W	
RATING TIME	Washing 1Hour	Spinning 15minutes

The energy label value is determined by the following program.

<Operating Procedures>

1. Set the Wash Selector to Heavy, the Water Selector to Wash, the Cycle Selector to Wash/Rinse, and supply water at 48 ºC by mixing cold and hot water until the water level reaches the marked level M.
2. Set the Wash Timer to 15 minutes, and when the time has passed, set the Wash Timer to 15 minutes again, and when the time has passed, set the Wash Timer to 10 minutes so that washing is performed for 40 minutes in total.
3. After washing is completed, drain the water until the tub is empty. (Set the Cycle Selector to Drain.)
4. After draining the water, move half of the laundry into the spin tub and perform the spin cycle for 2 minutes. When the spin cycle is complete, move the rest of the laundry into the spin tub and perform the spin cycle for 2 minutes.
5. Place all the laundry into the wash tub, set the Wash Selector to Normal, the Water Selector to Wash, the Cycle Selector to Wash/Rinse, supply cold water until the water level reaches the marked level H, and then perform the rinse cycle for 1 minute. (Set the Wash Timer to 1 minute).
6. After rinsing is the completed, drain the water until the tub is empty. (Set the Cycle Selector to Drain).
7. After draining the water, move half of the laundry into the spin tub and perform the spin cycle for 5 minutes. When the spin cycle is complete, move the rest of the laundry into the spin tub and perform the spin cycle for 5 minutes.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

800-SAMSUNG(726-7864), www.samsung.com

SAMSUNG

إرشادات المالك

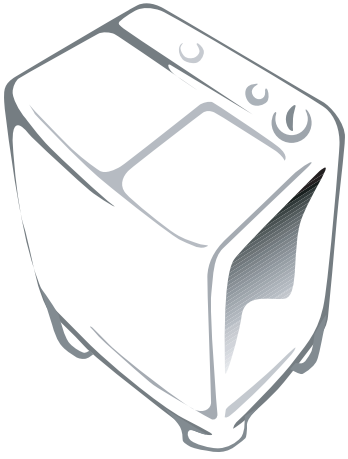

قبل تشغيل الجهاز، الرجاء قراءة هذا الدليل بالكامل والاحتفاظ به كمرجع في المستقبل.

قبل استخدام الغسالة ١
تنبيهات ١
احتياطات التشغيل ١
وصف الأجزاء ٢
لوحة التحكم ٢
التركيب ٣
البيئة ٣
تغيير موضع خرطوم التصريف ٣
كيفية غسيل المصفاة ٣
توصيل خرطوم التصريف ٣
تنظيف الغسالة ٣
إجراءات الغسيل ٤
لإجراء عملية الغسيل ٤
التجفيف ٥
الشطف ٥
شطف الماء الزائد ٥
شطف إضافي ٦
دليل الغسيل ٦
الصيانة ٦
استكشاف الأخطاء وإصلاحها
المواصفات

قم بتسجيل المنتج الخاص بك على
www.samsung.com/register
رقم الكود: DC68-01942X-03

Planet First 100% Recycled Paper

تم تصنيع هذا الدليل من ورق معاد تدويره بنسبة ١٠٠ ٪

قبل استخدام الغسالة

- في حالة استخدام غسالة مزودة بمضخة تصريف، انزع غطاء الخرطوم من فتحة التصريف.

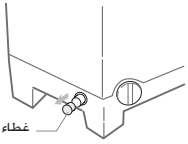

- أخرج المتعلقات الشخصية من الجيوب..

تنبيه

افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة، حيث أنها تسبب ضوضاء ومشاكل للغسالة. يجب فحص الجيوب.



تنبيهات

- **تأكد من توصيل الغسالة بطرف أرضي.**
لتجنب التعرض لصدمة كهربائية، استخدم ماسورة معدنية عند القيام بالتوصيلات الأرضية. ولكن، لا تقم بتوصيل الغسالة بطرف أرضي باستخدام أنابيب توصيل الغاز أو أسلاك الهاتف لتجنب خطر حدوث انفجار أو برق.



- **يجب عدم ادخال يديك لداخل حوض الماء اثناء التشغيل.**
فقد تعلق أصابعك في الغسيل المجفف مما يؤدي إلى إصابتك.

- **لا تسمح أبدًا للأطفال بتشغيل الغسالة أو اللعب بها.**
فقد يسقط الأطفال أثناء لعبهم بالغسالة داخل حوض الغسيل عن طريق الخطأ.

- **افصل سلك التيار الكهربائي من مصدر التيار الكهربائي في حالة عدم استخدام الغسالة.**
- **يجب تجنب سد فتحات التهوية بواسطة السجاد عند تركيب الغسالة على أرض مغطاة بالسجاد.**
- **إذا تلف سلك التيار الكهربائي الخاص بالغسالة، يجب استبداله عن طريق مركز الصيانة الذي تحدده الشركة المصنعة حيث تتطلب عملية الصيانة استخدام أدوات خاصة.**
- **لتجنب تجاوز سعه الغسالة وتلفها، يجب أن يتم ملئها بمستوى التشغيل المحدد باستخدام ضغط متوسط لتوريد الماء.**
- **الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.**
- **الغسالات التي بالامكان فتح غطائها اثناء التشغيل والتي تحتاج ١٥ ثانية او اكثر ليتوقف الحوض عن الدوران يجب اعتباره عطل**

احتياطات التشغيل

- **لا تستخدم ماء شديد السخونة. (٥٠ درجة مئوية أو أكثر).**
فقد تتعرض الأجزاء البلاستيكية للتشوه أو التلف.
كما يمكن أن تتلف الملابس أو تنعدم ألوانها.
- **قبل الغسيل، تأكد من تفريغ جميع جيوب الملابس.**
فقد يتسبب وجود مسامير أو دبابيس في الجيوب إلى تلف الغسالة أو الملابس.
- **أغلق صنبور الماء قليلا إذا كان ضغط الماء عالي جدًا.**
- **لتجنب التعرض للبلل، أغلق باب حوض الغسيل.**
- **لا تقم أبدًا برش الماء على لوحة التحكم.**
- **تأكد من وضع غطاء الأمان على الغسيل قبل إجراء عملية التجفيف.**
حيث يمنع ذلك خروج الغسيل من الحوض وتلفه.



- **تأكد من وضع خرطوم التصريف (أ) لأسفل.**



- **تأكد من وضع خرطوم التصريف (أ) في الحوض أو حوض الاستحمام بما يعلو ٧٠ ~ ٨٠ سم عن الأرض.**



WT60J7WNC1-01942X-03_AR.indd 1 2013-05-23 5:19:42

وصف الأجزاء

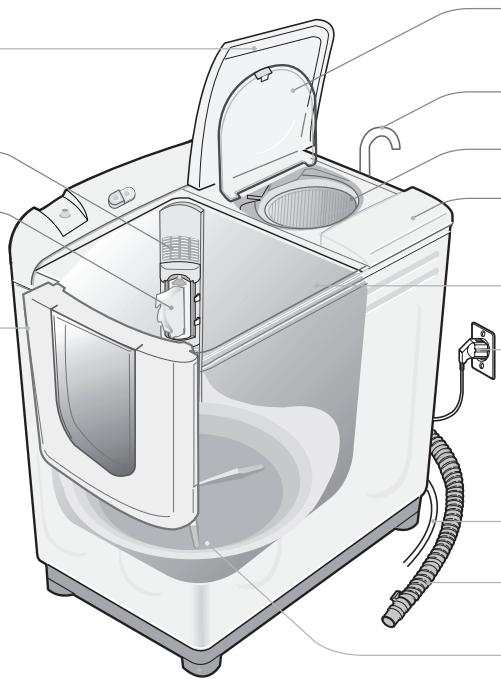

باب المجفف
عند فتح هذا الباب أثناء عمل المجفف، تتوقف عملية التجفيف بواسطة نظام الكبح.

مصفاة الماء الزائد

مصفاة النسالات
تستخدم هذه المصفاة لتجميع النسالات التي تتبقى أثناء عملية الغسيل.

باب حوض الغسيل
تأكد من غلق الباب أثناء عمليتي الغسيل والتجفيف.

الباب الداخلي

خرطوم التصريف
(مع وجود مضخة)

المجفف

باب المجفف

حوض الغسيل

سلك التيار الكهربي
قد لا يتطابق شكل القابس مع هذه الصورة.

سلك التوصيل الأرضي
(اختياري)

خرطوم تصريف الماء
(دون وجود مضخة)

المضخة

لوحة التحكم

١. **اختيار الماء**
أثناء عملية الغسيل، يجب اختيار «زر اختيار الماء» للغسيل. وأثناء عملية الشطف، يجب اختيار «زر اختيار الماء» للتجفيف.

٢. **مؤقت الغسيل**
يستخدم لضبط وقت الغسيل، من ١إلى ١٥ دقيقة.

٣. **اختيار الغسيل**
يمكنك من غسيل الملابس بفعالية من خلال عدة طريق.

٤. **اختيار الدورة**
يستخدم لاختيار عملية الغسيل أو الشطف أو التجفيف.

٥. **مؤقت التجفيف بتربينة الهواء**
يستخدم لضبط وقت التجفيف، من ١ إلى ١٠ دقائق.

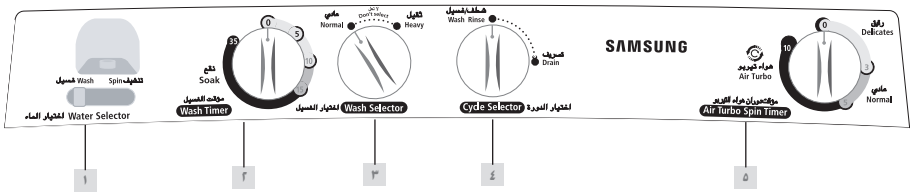

WT60J7WNC1-01942X-03_AR.indd 2 2013-05-23 5:19:44

التركيب

البيئة

اترك مساحة

اترك مسافة لا تقل عن ١٥ سم بين الغسالة والحائط.

ضع الغسالة على أرض ثابتة ومستوية.

في حالة وضع الغسالة على سطح غير مستو أو ضعيف، يؤدي ذلك إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل.
(المسافة المسموح بها ٢ ياردة)

يجب عدم وضع الغسالة في مكان او غرفة رطبة.

لا تضع الغسالة في غرف ينبعث منها البخار أو حيث تكون معرضة بشكل مباشر إلى المطر.
قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.

تجنب الضوء المباشر لأشعة الشمس أو الأجهزة الحرارية.

تأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الأجهزة الحرارية، أو غلايات الماء، إلى آخرة.
لا تضعها تحت أشعة الشمس المباشرة.

تغيير موضع خرطوم التصريف

قبل محاولة تغيير موضع خرطوم التصريف، افصل القابس من منفذ التيار الكهربائي.

١. وجه خرطوم التصريف إلى داخل الغسالة.
٢. قم بإخراج خرطوم التصريف من الفتحة المقابلة وأدخله في الحامل الخاص به.

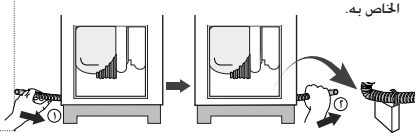

حامل الخرطوم

ضع خرطوم التصريف بما يعلو عن الأرض حوالي ٧٠ إلى ٨٠ سم للطرازات التي تحتوي على مضخة.

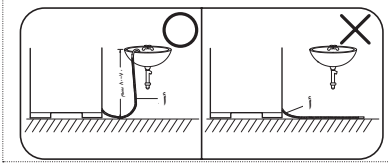

كيفية غسيل المصفاة (في حالة وجود مضخة تصريف)

١. ضع قطعة من القماش أسفل مصفاة الغسالة حتى لا تبتل الأرض.
٢. لف المصفاة عكس عقارب الساعة وانزعها.
٣. أزل الأوساخ ولف المصفاة مرة أخرى في اتجاه عقارب الساعة لإعادتها إلى مكانها.

ملاحظة : يجب غسل المصفاة مرة واحدة على الأقل في الأسبوع.

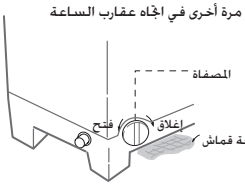

توصيل خرطوم التصريف

أدخل خرطوم التصريف (أ) وادفعه حتى يتم توصيله كما يوضح السهم.



تنظيف الغسالة

تنظيف مصفاة النسالات

في حالة امتلاء مصفاة النسالات ببقايا النسالات بعد انتهاء الغسيل.
ادفعها إلى الأسفل (١) ثم اسحبها للخارج كما هو موضح في الشكل (٢).
أزل النسالات المتجمعة واشطف شبكة المصفاة.

مصفاة النسالات

تنظيف الإطار المطاطي للغطاء

١. قم بتدوير الإطار المطاطي للغطاء في اتجاه عقارب الساعة واسحبه للخارج.
٢. قم بتنظيف الإطار المطاطي للغطاء.
٣. قم بإعادة تركيب الإطار المطاطي للغطاء وتدويره عكس اتجاه عقارب الساعة حتى يثبت في موضعه.

ملاحظة: يجب تنظيف الإطار المطاطي للغطاء مرة على الأقل كل شهر.

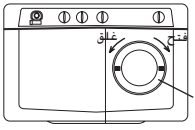

الإطار المطاطي للغطاء

تنظيف حوض الغسيل

امسح أي بقايا موجودة بالخزانة ولوحة التشغيل باستخدام قطعة قماش ناعمة.
لا تستخدم بنزين أو سوائل متطايرة أو مواد منظفة أو شمع ولا تحك الغسالة باستخدام فرشاة، حيث يؤدي ذلك إلى تلف الأسطح المطلية والأجزاء البلاستيكية.

WT60J7WNC1-01942X-03_AR.indd 3 2013-05-23 5:19:47

إجراءات الغسيل

لإجراء عملية الغسيل

١. **قبل بدء عملية الغسيل، تحقق مما يلي:**
- صل خرطوم توريد الماء وافتح الصنبور.
- صل سلك التيار الكهربائي بمنفذ التيار الكهربائي.
- ضع خرطوم التصريف (أ) لأسفل باتجاه الحوض.

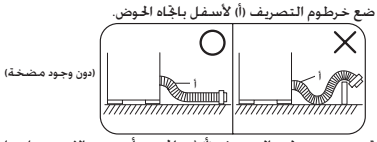

- قم بوضع خرطوم التصريف (أ) في الحوض أو حوض الاستحمام بما يعلو ٧٠ ~ ٨٠ سم عن الأرض.

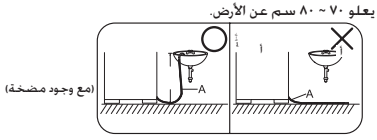

٢. **اضبط "زر اختيار الغسيل" على الوضع المطلوب.**
"عادي أو ثقيل"

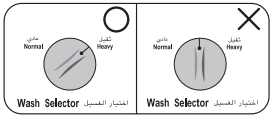

٣. **اضبط "زر اختيار الدورة" على "شطف•الغسيل".** (في حالة عدم وجود مضخة تصريف) (**"غسيل"** في حالة وجود مضخة تصريف)

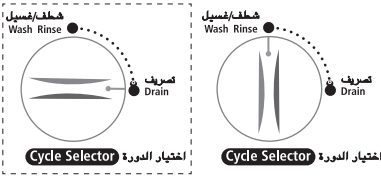

٤. **اضبط "زر اختيار الماء" على "غسيل".**

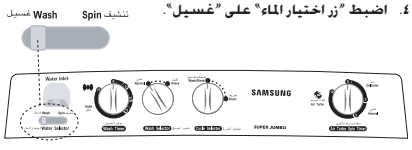

٥. **ضع الملابس في حوض الغسيل واضبط ضغط الماء المناسب لملء الحوض بحيث لا يتعدى المستوى "H3" (عالي٣).**

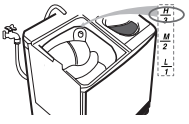

٦. **قم بملء حوض الغسيل بالماء حتى أقل مستوى "L1" (منخفض١) من خلال ضبط ماء الصنبور بعناية ثم أضف مسحوق الغسيل.**

٧. **اضبط "مؤقت الغسيل" على مدة تتراوح بين ١ - ٣٥ دقيقة.**

النقع

- **اضبط "مؤقت الغسيل" على مدة تزيد عن "١٥" دقيقة لتشغيل وظيفة "النقع".**
- **إذا تم ضبط "مؤقت الغسيل" على مدة تقل عن "١٥" دقيقة، ستعمل وظيفة "الغسيل" فقط. (بدون نقع)**
- **في حالة سكون الغسالة لمدة أقصاها ٥ دقائق عند ضبط مؤشر "مؤقت الغسيل" على مدة تزيد عن "١٥" دقيقة، فإنها تكون في عملية النقع ولا يعد ذلك عطلاً بها.**

٨. **بعد الغسيل، اضبط "زر اختيار الدورة" على "تصريف" لإجراء عملية التصريف.**

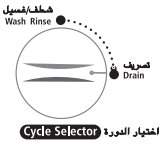

٩. **الغسيل بالنقع**

١) ضع الملابس في حوض الغسيل.

٢) استخدم صنبور الماء أو دلو لملء حوض الغسيل بكمية الماء المطلوبة.

٣) ضع مسحوق الغسيل بناءًا على كمية الماء والإرشادات المطبوعة على عبوة مسحوق الغسيل.

٤) اضبط "مؤقت الغسيل" على مدة تتراوح بين "١٥" و"٣٥" دقيقة.
- **تبدأ عملية الغسيل تلقائيًا من خلال وظيفة "الغسيل بالنقع" لمدة (١٥ دقيقة) بعد اكتمال النقع (من ٢ إلى ٢٠ دقيقة).**
- **تتكرر الدورة الخاصة بوظيفة "النقع" (٢٠ دقيقة) وهي عمل لمدة من ١,٥ و٢,٠ دقيقة واستراحة لمدة ٥ دقائق ٣ مرات.**

WT60J7WNC1-01942X-03_AR.indd 4 2013-05-23 5:19:50

التجفيف

١. انقل الملابس إلى المجفف وقم بترتيبها على نحو متساوٍ.

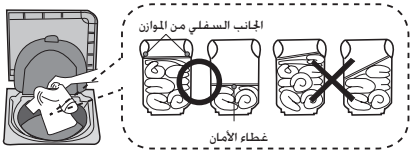

٢. تأكد من وضع غطاء الأمان وإغلاق الباب الداخلي.

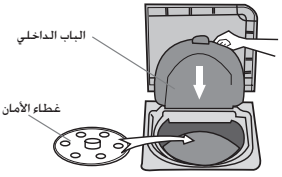

٣. أغلق باب المجفف.

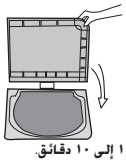

٤. اضبط "مؤقت التجفيف بتربينة الهواء" من ١ إلى ١٠ دقائق.

٥. التجفيف غير مكتمل. (اهتزاز شديد أو عدم اتزان) راجع "عند وضع..." في صفحة ٦.

الشطف

١. اضبط "زر اختيار الدورة" على "شطف الغسيل".
(في حالة عدم وجود مضخة تصريف)
(«غسيل» في حالة وجود مضخة تصريف)

(دون وجود مضخة)

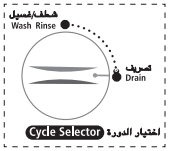

(مع وجود المضخة)

٢. قم بتوريد كمية مناسبة من الماء بحيث لا يتدفق الماء من أعلى حوض الغسيل.

٣. اضبط "مؤقت الغسيل" من ٢ إلى ٣ دقائق.

٤. قم بتصريف الماء. اضبط "زر اختيار الدورة" على "تصريف"



٥. كرر هذه الدورة حتى ينتهي تصريف الماء. (من ٢ إلى ٣ دورات)

٦. في حالة عدم وجود مضخة تصريف.
- تأكد من وضع خرطوم التصريف لأسفل.

في حالة وجود مضخة تصريف.
- تأكد من وضع خرطوم التصريف في الحوض أو حوض الاستحمام.

شطف الماء الزائد

١. استمر في توريد الماء
اضبط ضغط الماء بحيث لا تزيد كمية الماء التي تم توريدها عن الماء المُصرف.

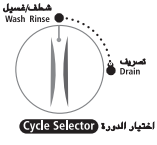

(دون وجود مضخة)

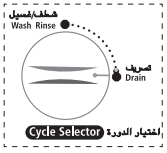

(مع وجود المضخة)

٢. اضبط "مؤقت الغسيل" من ٦ إلى ٨ دقائق.

٣. بمجرد توقف "مؤقت الغسيل"، أغلق صنبور الماء.



٤. اضبط "زر اختيار الدورة" على "تصريف".

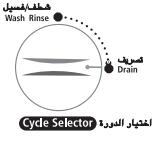

WT60J7WNC1-01942X-03_AR.indd 5 2013-05-23 5:19:53

شطف إضافي

يمكنك بعد إجراء الشطف اختيار هذه الدورة للحصول على شطف أكثر فعالية (لا تقم باختيار هذه الدورة فقط للشطف.)

١ ضع الغسيل بالتساوي في المجفف.

٢ اضبط «زر اختيار الماء» على «تجفيف» (أ) و«زر اختيار الدورة» على «تصريف» (ب).

٣ قم بتوريد الماء لمدة دقيقة. اضبط معدل توريد الماء لمنع تدفقه من حوض الغسيل.

٤ بعد إيقاف توريد الماء. قم بتغطية الغسيل بغطاء الأمان وأغلق الباب الداخلي.

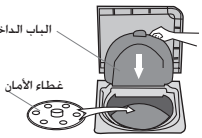

٥ أغلق باب المجفف.



٦ اضبط «مؤقت التجفيف بترينة الهواء» من ٢ إلى ٣ دقائق.

دليل الغسيل

وقت الغسيل

مستوى الماء	منخفض	متوسط	عالي
قمصان (اصطناعية)	٢٢ قطعة	٢٩ قطعة	٣٥ قطعة
ملابس داخلية (قطن)	٣٨ قطعة	٤٨ قطعة	٥٨ قطعة
ملابس العمل (قطن)	١٦ قطعة	٢٠ قطعة	٢٥ قطعة

مسحوق الغسيل

كمية المسحوق	مستوى الماء
٤٤ جرام	منخفض (٤٤ لتر)
٥٦ جرام	متوسط (٥٦ لتر)
٦٧ جرام	عالي (٦٧ لتر)

- كمية مسحوق الغسيل متوسطة.

اتبع الإرشادات الخاصة بمسحوق الغسيل المطبوعة على العبوة لمعرفة الكمية المناسبة المطلوب إضافتها.

- حدد كمية مسحوق الغسيل بناءًا على نوعية القماش.

وقت التجفيف

نوع الغسيل	الوقت
رقيق (أقمشة اصطناعية)	دقيقة
صوف	من ١ إلى ٢ دقيقة
قطن	من ٣ إلى ٥ دقائق
سميك (قطن)	٥ دقائق
سميك (قطن)	١٠ دقائق. (هواء تيربو)

الصيانة

عند وضع الغسيل في المجفف.

وزع الغسيل بالتساوي وقم بوضع غطاء الأمان على حاوية المجفف كما هو موضح بالشكل.

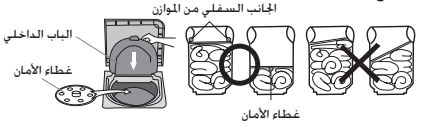

لالتقاط الملابس التي سقطت بين المجفف والحوض.

لمزيد من الأمان. افصل سلك التيار الكهربائي عن المقبس.

١. فك البراغي من باب المجفف.
٢. اسحب باب المجفف لإزالته.
٣. قم بإزالة الملابس
٤. أغلق باب المجفف.

WT60J7WNC1-01942X-03_AR.indd 6 2013-05-23 5:19:55

استكشاف الأخطاء وإصلاحها

المشكلة	موضع التحقق	المشكلة	موضع التحقق
١. **الغسالة لا تعمل.**	تحقق من توصيل سلك التيار الكهربائي بالمنفذ. هل انقطع التيار الكهربائي؟	٤. **لا يتم تصريف الماء.**	في حالة عدم وجود مضخة تصريف. - تأكد من وضع خرطوم التصريف لأسفل. في حالة وجود مضخة تصريف. - تأكد من إزالة غطاء الخرطوم من فتحة التصريف. ☚ راجع «قبل استخدام...» في صفحة ١.
٢. **الملابس لا تتحرك بحرية.**	هل تم وضع حمولة زائدة من الغسيل؟	٥. **المجفف لا يعمل.**	هل تم إغلاق باب المجفف بشكل كامل؟ هل يسقط الغسيل (الجوارب، إلى آخرة) خارج المجفف ويلتصق بالمحور؟ ☚ راجع «لالتقاط...» في صفحة ٦.
٣. **التجفيف غير مكتمل. (اهتزاز شديد أو عدم اتزان.)**	هل تم توزيع الغسيل بالتساوي؟ ☚ راجع «عند وضع...» في صفحة ٦.	٦. **يتم تصريف الماء في الحال.**	فيحالة عدم وجود مضخة تصريف. - هل تم ضبط «اختيار الدورة» على تصريف؟ - هل خرطوم التصريف مسدود بالنتافات؟ ☚ قم بتعليق خرطوم التصريف على الخطاف الخاص به. املأ نصف حوض الغسيل بالماء وحاول التصريف مرة أخرى. (سيتم إزالة هذه النتافات عن طريق ضغط تصريف الماء.) في حالة وجود مضخة تصريف. - هل تم تعليق خرطوم التصريف بما يعلو ٧٠ ~ ٨٠ سم عن الأرض؟ ☚ راجع «توصيل خرطوم...» في صفحة ٣.

المواصفات

سعة الغسيل القصوى	٧ كجم	
السعة القصوى للتجفيف	٣,٥ كجم	
الأبعاد مم	العرض ٨٢٠ مم × العمق ٥٢٤ مم × الارتفاع ١٠٠٠ مم	
ضغط الماء	من ٠,٠٥ إلى ٠,٧٨ ميغاباسكال من ٠,٥ إلى ٨,٠ كجم·قوة/سم٢	
الوزن	٣٦ كجم	
فعالية الاستخلاص	٥٠ ٪	
الكمية القياسية للماء	منخفض ٤٤ لتر متوسط ٥٦ لتر عالي ٦٧ لتر	
أقصى إدخال للموتور	٥٥٠ وات	
استهلاك الطاقة في الغسيل	٣٥٠ وات	
استهلاك الطاقة في التجفيف	٢٥٠ وات	
الوقت المقدر	الغسيل ساعة واحدة	التجفيف ١٥ دقيقة

يتم تحديد قيمة مستوى الطاقة بواسطة البرنامج التالي.

< إجراءات التشغيل >

١. قم بتعيين «اختيار الغسيل» إلى «ثقيل». وتعيين «اختيار الماء» إلى «غسيل» وتعيين «اختيار الدورة» إلى «شطف/غسل» وقم بتزويد المياه بدرجة حرارة ٤٨ درجة مئويةعن طريق مزج الماء البارد بالساخن حتى يصل مستوى الماء إلى مستوى العلامة M.

٢. قم بتعيين «مؤقت الغسيل» إلى ١٥ دقيقة. وعند مرور الوقت. قم بتعيين «مؤقت الغسيل» إلى ١٥ دقيقة مرة أخرى. وعند مرور الوقت. قم بتعيين «مؤقت الغسيل» إلى ١٠ دقائق حتى يتم إجراء الغسيل لمدة ٤٠ دقيقة.

٣. بعد الانتهاء من الغسيل. قم بتصريف الماء حتى يتم تفريغ الحوض. (قم بتعيين «اختيار الدورة» إلى «تصريف».)

٤. بعد تصريف الماء. قم بنقل نصف الغسيل إلى حوض التنشيف وقم بتشغيل دورة التنشيف لمدة دقيقتين. عند الانتهاء من دورة التنشيف. قم بنقل باقي الغسيل إلى حوض التنشيف وقم بتشغيل دورة التنشيف لمدة دقيقتين.

٥. قم بوضع كافة الغسيل داخل حوض الغسيل. وقم بتعيين «اختيار الغسيل» إلى «عادي». وقم بتعيين «اختيار الغسيل» إلى «غسيل». وتعيين «اختيار الدورة» على «شطف/غسيل». ثم قم بتزويد الماء البارد حتى يصل مستوى الماء إلى مستوى العلامة H. ثم قم بتشغيل دورة الشطف لمدة دقيقة واحدة. (قم بتعيين «مؤقت الغسيل» إلى دقيقة واحدة).

٦. بعد الانتهاء من الشطف. قم بتصريف الماء حتى يتم تفريغ الحوض. (قم بتعيين «اختيار الدورة» إلى «تصريف»).

٧. بعد تصريف الماء. قم بنقل نصف الغسيل إلى حوض التنشيف وقم بتشغيل دورة التنشيف لمدة ٥ دقائق. عند الانتهاء من دورة التنشيف. قم بنقل باقي الغسيل إلى حوض التنشيف وقم بتشغيل دورة التنشيف لمدة ٥ دقائق.

اتصل بـ SAMSUNG WORLD WIDE

في حالة وجود أي استفسارات أو تعليقات حول منتجات سامسونج. الرجاء الاتصال بمركز خدمة عملاء سامسونج. الإمارات
www.samsung.com ,800-SAMSUNG (726-7864)